



Viking User Manual





Congratulations on your new Hegel Viking reference CD player. All Hegel products are based on the same philosophy: Keep the music signal as close to the original as possible. Nothing is added, nothing is taken out - no artificial ingredients.

With the Viking, we have applied this philosophy without compromise. The Viking does not play SACD, there is no streaming, and no digital inputs. It only plays standard (Redbook) CDs. It is because of this singular purpose that the Viking can reach unprecedented levels of fidelity.

With a single 16bit/44,100 signal to process, the already excellent DAC is optimized to perform at its absolute best. A dedicated laser and CD drive ensure optimal reading, while the Hegel-designed discrete Master clock system controls the

timing of the player and reduces jitter to an absolute minimum. And perhaps most importantly, by doing only one thing we can invest in only high-quality components that make this CD player truly astounding.

The Hegel Viking is a peak-performance machine. It is designed to do one thing and one thing only: To capture every single aspect of the music you are listening to. The Hegel Viking is the best CD player we have ever made.


We hope you enjoy.

A handwritten signature in black ink, appearing to read 'Bent Holter', with a long horizontal line extending to the right.


Bent Holter
Founder Hegel Music System

Index


What's in the box	5
General Use	6
Connections	7
Remote Control	9
Technical Specifications	10
Safety Instructions & Warranty	11

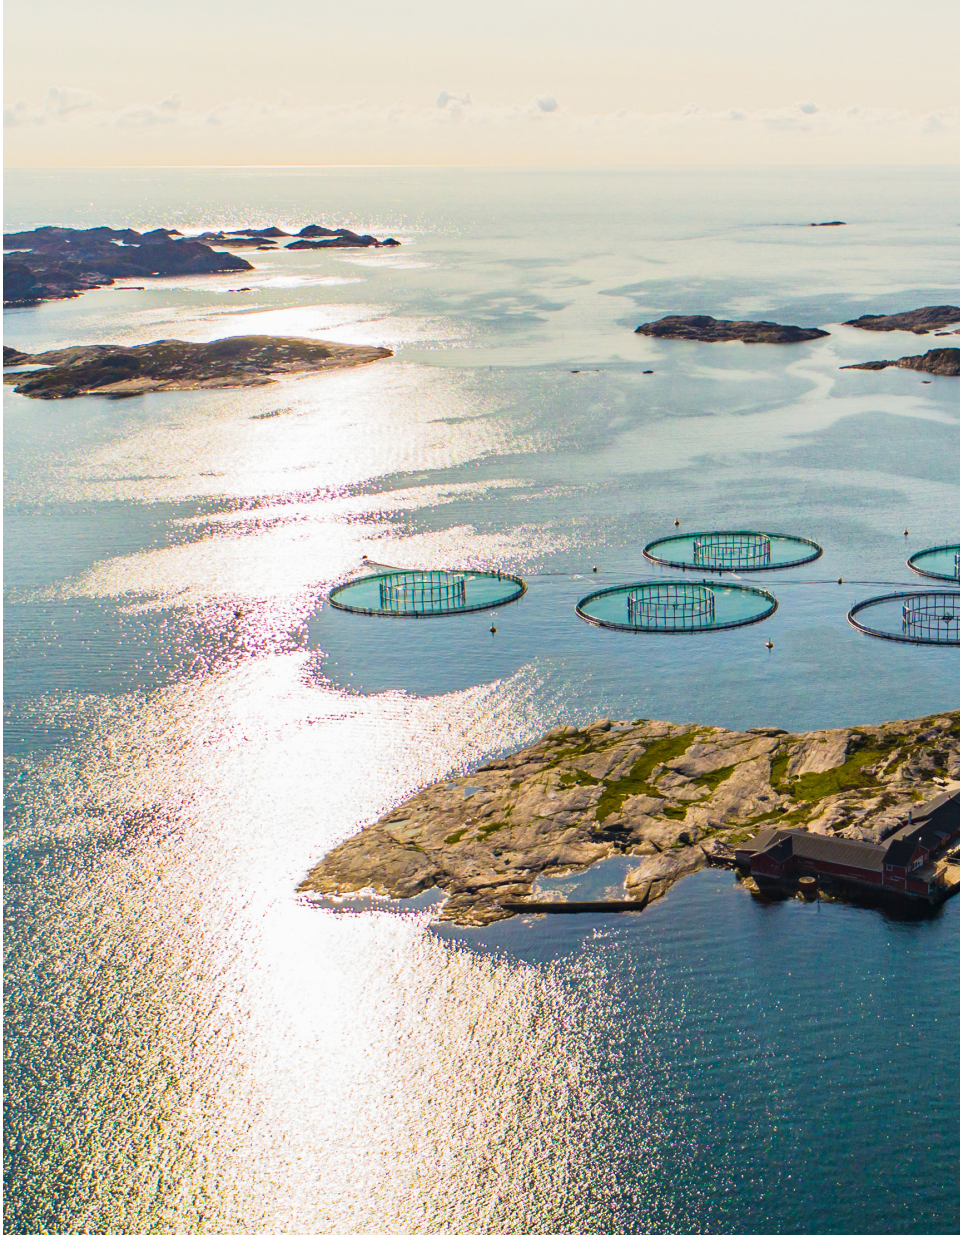

What's In The Box

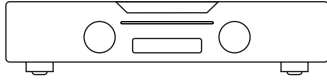

CD-Player

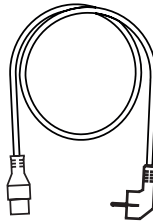


Power Cord



Accessory Box




Remote
Control

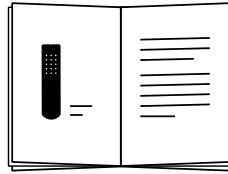

User Manual

General Use

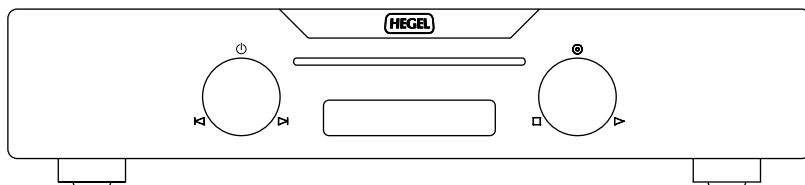



Power

The CD-player is powered on and off with the  button.


Insert

CDs are inserted into the slot with the label side facing upwards. The loading mechanism will load the disc automatically.

Play/Pause

To start the CD, push the  button. To Pause, press the  button again.



Stop

To stop the CD, push the  button.



Eject

Pushing the  button ejects any inserted CD.

Next track/Fast Forward



Pushing the  button skips to the next track. Hold  to fast forward the current track.



Previous track/Rewind

Pushing the  button skips to the previous track. Hold  to rewind the current track.

Auto Standby


The CD-player will automatically turn off after 15 minutes without play.

To deactivate: Press and hold the  button while powering on with the  button.

To reactivate: Press and hold the  button while powering on with the  button.

NOTE: If the CD does not insert automatically, do not apply force. Press the Eject button twice to trigger loading.

Connections

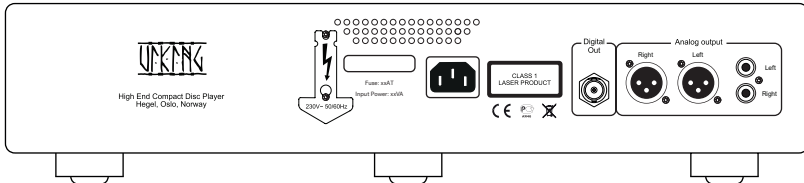

Always power off the device before connecting input/output audio cables and the power cable, or changing the voltage setting.

Analog Outputs

- XLR: Fixed balanced analog output
- RCA: Fixed unbalanced analog output

Digital Output

- BNC true 75 Ohm

The CD-Player has two types of analog audio outputs: unbalanced audio output (RCA) and true balanced audio output (XLR). For the highest level of sound quality, we recommend using the balanced XLR outputs.

NOTE: XLR Pin Configuration:

Pin 1 is chassis ground, pin 2 is positive phase and pin 3 is negative phase.

Mains Power Connection

 
Mains power connector: 230V/115V

WARNING:

Using the wrong voltage can cause serious damage to your product and will void the warranty! See voltage rating on the device.



Remote Control - RC8

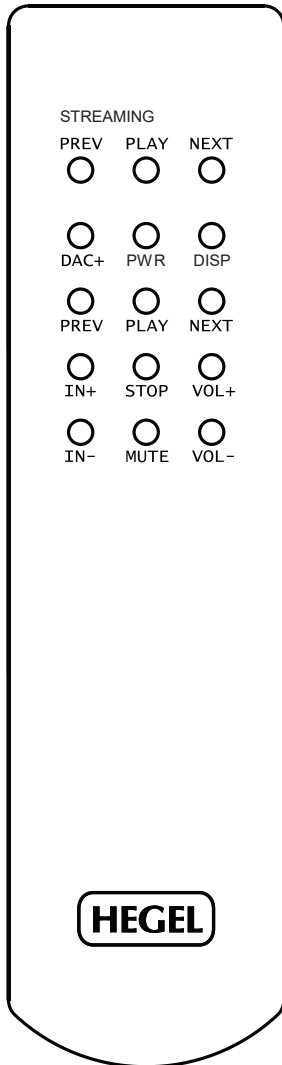

Remote control buttons (starting top left)

PREV	Skip backward on compatible USB or network media players
PLAY	Play/Pause on compatible USB or network media players
NEXT	Skip forward on compatible USB or network media players
DAC+	Input selector on DACs
PWR	Standby on amplifiers
DISP	Display on/off on amplifiers Hold for display off
PREV	Skip backward on CD-players Hold to rewind
PLAY	Play/Pause on CD-players
NEXT	Skip forward on CD-players Hold to fast forward
IN+	Switch to next input
STOP	Stop on CD-players
VOL+	Volume up
IN-	Switch to previous input
MUTE	Mute on amplifiers
VOL-	Volume down

Repeat track/disc

Hold **STREAMING PLAY** and press **CD PLAY**.

General information

The Hegel Viking can be controlled with the included Hegel RC8 Remote Control. The RC8 also controls other Hegel products, such as amplifiers and preamplifiers, and most connected media players.

Batteries

The remote control uses two standard 1.5-volt LR03 AAA batteries.

To insert the batteries, use a crosshead (Phillips) screwdriver to remove the back lid. When reassembling, be careful not to overtighten the screws.

Technical Specifications

Viking CD-Player

Supported discs	12 cm Redbook CDs
Line level Output	1*unbalanced fixed(RCA) 1*unbalanced fixed(XLR)
Output voltage analog	2,5V RMS
Digital Output	1*BNC true 75 Ohm
Frequency response	0Hz-22 kHz
Distortion	Less than 0.0015%
Finish:	Black
Dimensions/weight	9,9 cm x 43 cm x 30,5 cm (HxWxD), 7,3 kg
Dimensions/weight US	3,54" x 17" x 12" (HxWxD), 16,1 lbs

Safety Instructions & Warranty

Unpacking and Packing

Remove the top shock absorber. When lifting the device, avoid holding the knobs or connectors. Slide the bag off/on the device. When packing, make sure the bottom shock absorber is placed at the bottom of the original cardboard box. Place the device into the shock absorber. Place the top shock absorber on top of the device.

Placement and Cooling

The Hegel device should be placed on a flat, hard surface for proper cooling. The device must never be placed on a carpet or similar surface as this obstructs air circulation through the unit. To maintain proper ventilation, leave a space of a minimum of 10 cm from the rear, top, and side panels of the device. The front side of the enclosure should be left open.

Connecting the wires

Incorrect connections or damaged wires can cause short circuits, which can damage the device, cause electrical shock, and pose a fire hazard. Follow this manual's installation instructions and ensure all wires are connected correctly before connecting the power source.

Proper use

Use the device only for its intended purpose and do not modify or misuse it in any way. The product is designed for indoor use only and must not be exposed to rain or moisture.

Cleaning

Unplug the amplifier from the AC outlet before cleaning. Fingerprints or stains can be removed with a cloth slightly dampened with warm water or a mild detergent suitable for cleaning mirrors and windows.

Power source

Only use the power source specified on the back panel and ensure the voltage matches the voltage in your area.

Repair

Hegel products should only be opened or serviced by certified technicians. The devices contain electronic components that may cause severe electric shock. Work performed on Hegel products by unqualified personnel may cause serious damage or personal injury.

Opening the product by non-authorized personnel will void the warranty.

Warranty

All Hegel products come with a 2-year warranty against defective materials and workmanship. The warranty is limited to the region where it was originally purchased. There is no need for registering the warranty. The purchase receipt will work as a start date for the warranty.

In case you need assistance with your Hegel product, please contact your nearest dealer or distributor. These are listed on www.hegel.com. Our dealers are carefully chosen for their expertise and should be able to help you with any Hegel related issue. You can of course always reach us directly by sending an email to info@hegel.com or by contacting us on our social media pages.

For more information about the Viking CD-player please visit www.hegel.com



V2



