

SONY

Digital Media Player
Lecteur média numérique
Цифровой проигрыватель мультимедиа

Startup Guide
Guide de démarrage
Guía de inicio
Руководство по началу работы

GB 入門指南
FR 入門指南
ES 시작 설명서
RU دليل بدء التشغيل

CS CT KR AR



NW-A100TPS/A105/A106

5-006-018-3(3)
©2019 Sony Corporation
Printed in Malaysia /
Imprimé en Malaisie



(3)

(3)


(3)

(3)

(3)

(3)

1

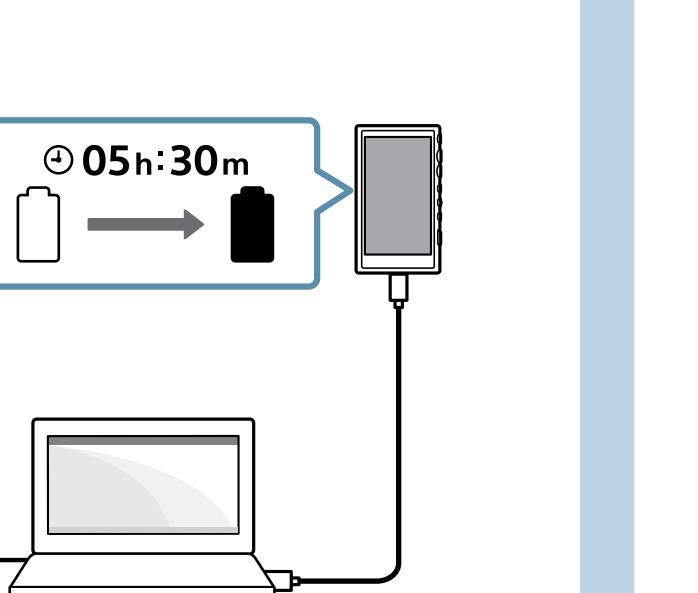

2



Turn on your WALKMAN® and follow the onscreen instructions to perform the initial setup. If you do not have enough information for Wi-Fi or Google™ account settings, skip these steps.


Включите WALKMAN® и следите инструкциям на экране для выполнения начальной настройки. Если у вас недостаточно информации для настроек Wi-Fi или учетной записи Google™, пропустите эти пункты.

WALKMAN®을 켜고 화면 상의 지침에 따라 초기 설정을 수행하십시오. Wi-Fi 또는 Google™ 계정 설정에 대한 정보가 충분하지 않은 경우, 이 단계를 건너뛰십시오.


Google is a trademark of Google LLC.
Google est une marque de Google LLC.
Google es una marca de Google LLC.
Google является товарным знаком компании Google LLC.
Google 是 Google LLC 的商标。
Google 是 Google LLC 的商标。
Google 는 Google LLC의 상표입니다.

NW-A105/A106



NW-A100TPS

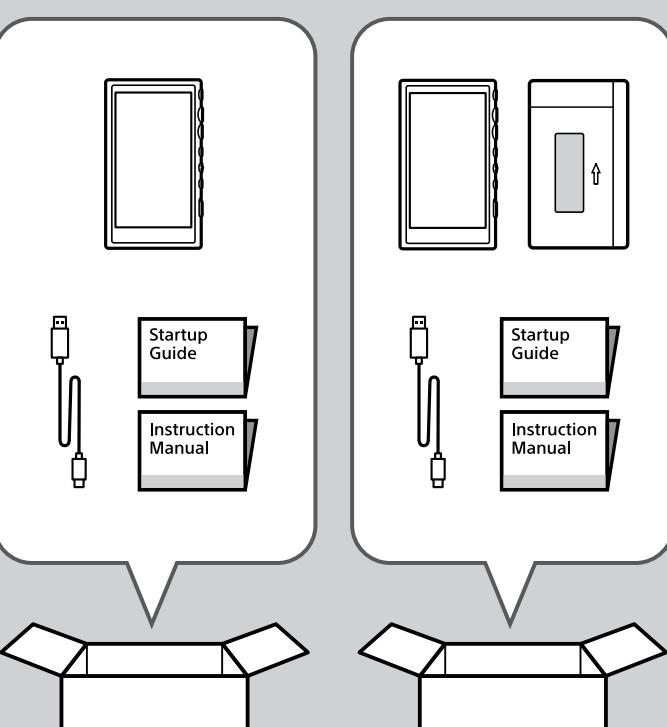


3

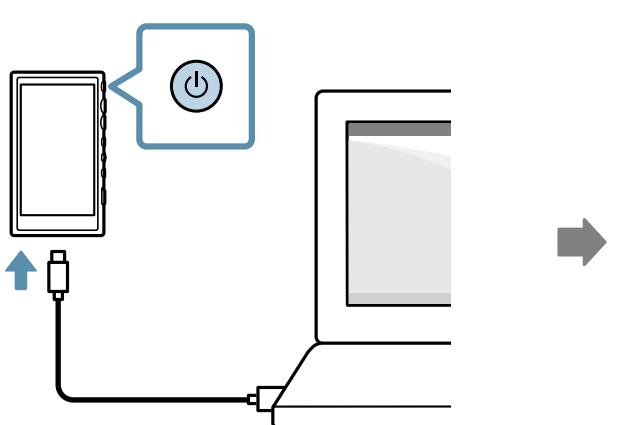

4

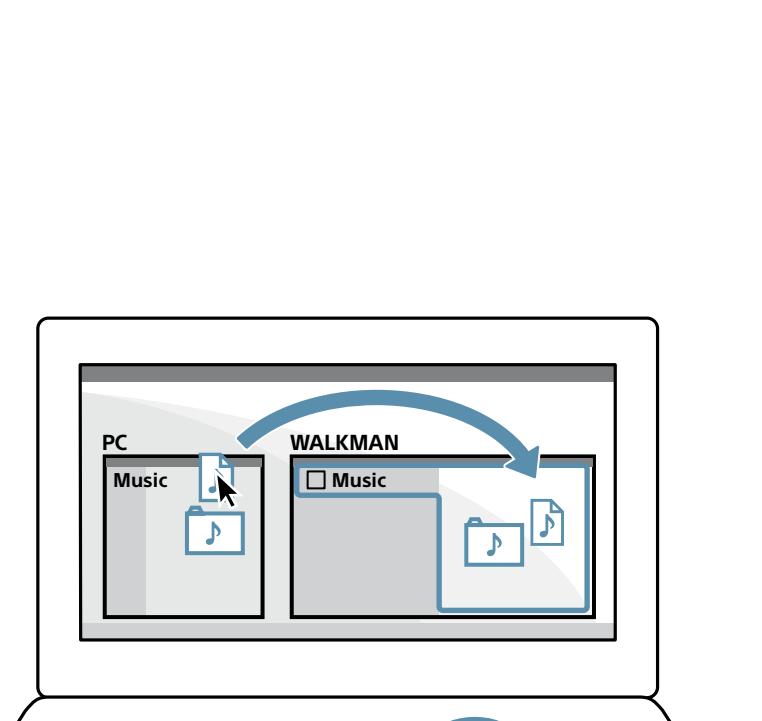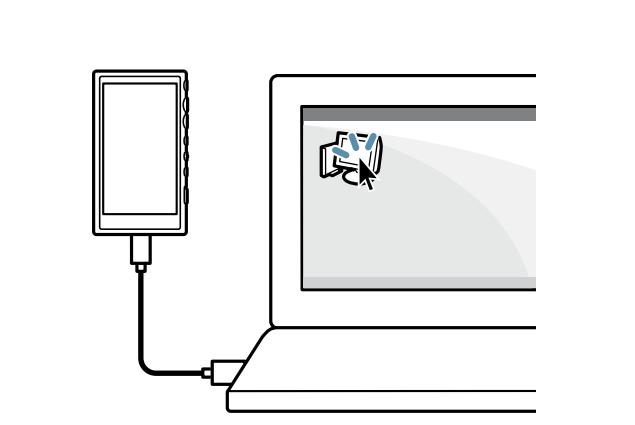

4

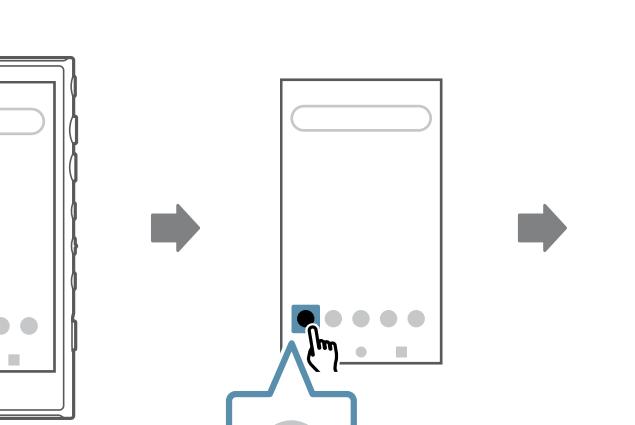

4

